# TuAlp Wall Panels Installation Guide




# 1. Safety Precautions



It is very important to take safety precautions before starting the job. Use the following protective equipment:


- Glasses: Protect your eyes.
- Gloves: Protect your hands from cuts and injuries.
- Helmet: Protect your head from impacts.

# 2. Removing Panels from the Box

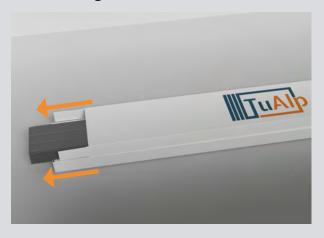


Carefully remove the panels from the box, ensuring not to damage them. Be careful to prevent the panels from scratching each other.

# 3. Stacking Panels Horizontally

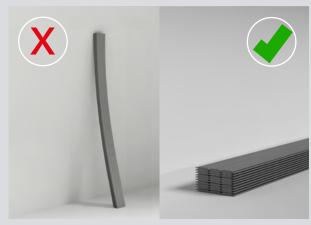


Do not stack the panels vertically. The panels should be removed in a horizontal position. Use blocks to prevent turning when stacking horizontally.

# 4. Measuring the Wall for Profile Application

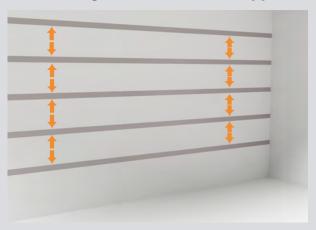

Measure the wall and cut the profiles with a buttress gear saw. Be careful when cutting.


# 5. Mounting Profiles

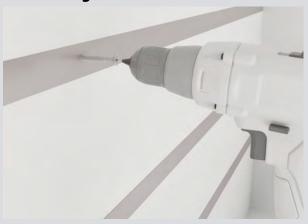

When mounting the profiles to the wall, ensure that the spacing is a minimum of 30 CM and a maximum of 50 CM. Make sure each profile is properly aligned during installation.

(For acoustic panels, we recommend direct wall adhesive application.)

# 6. Cutting Panels

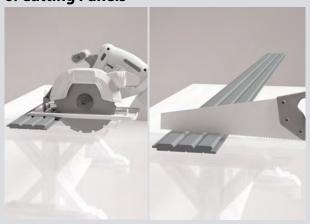

Cut the wall panels according to your wall measurements using a buttress gear saw or a hand saw. Be careful not to damage the panel during cutting. Ensure there are no dents on the edges and corners of the panels after cutting.


### 7.1 Nail or Nail Gun Installation





Mount the panels using nails or a nail gun. Nail guns provide faster and more efficient installation. Ensure the nails are placed evenly and correctly during installation. Always follow safety rules when using a nail gun.

# 7.2 Adhesive Installation

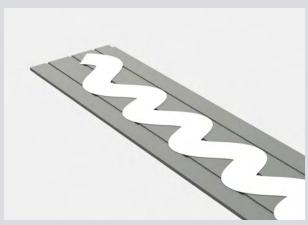

Mount the panels using adhesive. Ensure the surface is clean and dry before applying the adhesive. Apply the adhesive evenly to the back of the panels and wait for a sufficient drying time after sticking them to the wall.


Note: We recommend using adhesive for acoustic panels.

### **Moisture Barriers**

TWDIY	LADIX	LADIX	LADIX	LADIX	LADIX
LADIX	LADIX	LADIX	LADIX	LADIX	LADIX
LADIX	LADIX	LADIX	LADIX	LADIX	LADIX
LADIX	LADIX	LADIX	LADIX	LADIX	LADIX
LADİY	LADIX	LADIX	LADIX	TANTY	LADIX
LADIX	LADIX	LADIX	LADIX	LADIX	LADIX
LADIX	LADIX	LADIX	LADIX	LADIX	LADIX
prom		S110-110	enotic.	enoin	unoin
LADIX	LADIX	LADIX	LADIX	LADIX	LADIX

In humid environments, moisture barriers should be used to extend the life of the panels and increase the solidity of the installation. Placing moisture barrier underlays under the panels prevents moisture from passing to the panel and enhances the adhesive effect.

# 8. Installing Panels with a Locking System

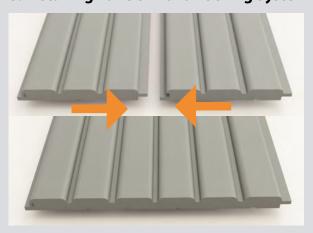

Continue the installation by fitting the locking system of the wall panels. Ensure the locking system works properly and the panels are aligned.



### \*Additional Information:

- Storage: Products should not be exposed to direct sunlight. Store them in dry, cool environments.
- Cleaning: Clean products using a moist-cotton cloth, soapy-cotton cloth, or non-alcoholic fluid glossy surface cleaners. Avoid using alcohol-based surface cleaners or abrasive cleaners. Never use thinner or acid-based substances for cleaning.

# \*\*User Guide Tips:

- •Follow each step in guide.
- •Do not neglect safety precautions.
- •Measure the panels and profiles accurately.
- •Take care not to damage the panels during installation.
- •Remove and clean safety equipment after installation.
- •Dispose of waste in accordance with the law to avoid environmental damage.

By carefully following this guide, you can successfully install wall panels.

To gain a better understanding of the installation process, please watch the detailed video at the following link. This video provides step-by-step instructions and tips, clearly demonstrating each stage of the installation:

